

**SHIPPER'S DECLARATION FOR DANGEROUS GOODS**

(Provide at least three copies to the airline.)

**A**

Shipper  
Goody Hospital,  
55555 Goody St,  
Goodtown,  
GA 30005

Air Waybill No. 123412341234 **B4**

Page 1 of 1 Pages

Shipper's Reference Number **B5**  
EZIP's issued Return Number

Consignee  
Eckert & Ziegler Isotope Products  
1800 N. Keystone Street,  
Burbank CA 91504

*Two completed and signed copies of this Declaration must be handed to the operator*

**WARNING**

**Failure to comply with all respects with the applicable Dangerous Goods Regulations may be in breach of the applicable law, subject to legal penalties.**

**B3**

**TRANSPORT DETAILS**

This shipment is within the limitations prescribed for: *(delete non applicable)*

Airport of Departure

**ATL**

**B1**

<del>PASSENGER AND CARGO AIRCRAFT</del>	CARGO AIRCRAFT ONLY
---	---------------------

Airport of Destination: **LAX** **B2**


Shipment type: *(delete non-applicable)* **B6**  
~~NON-RADIOACTIVE~~ RADIOACTIVE

**C**

**NATURE AND QUANTITY OF DANGEROUS GOODS**

*UN Number or Identification Number, proper shipping name, Class or Division (subsidiary risk), packing group (if required), and all other required information.*

UN 2915, Radioactive material, Type A package, Class 7, Co-57, Metallic Salt solid. 1 Type A package x 37 MBq. II Yellow, TI 0.1 dims (L) 71 x (W) 33 x (H) 97 cm

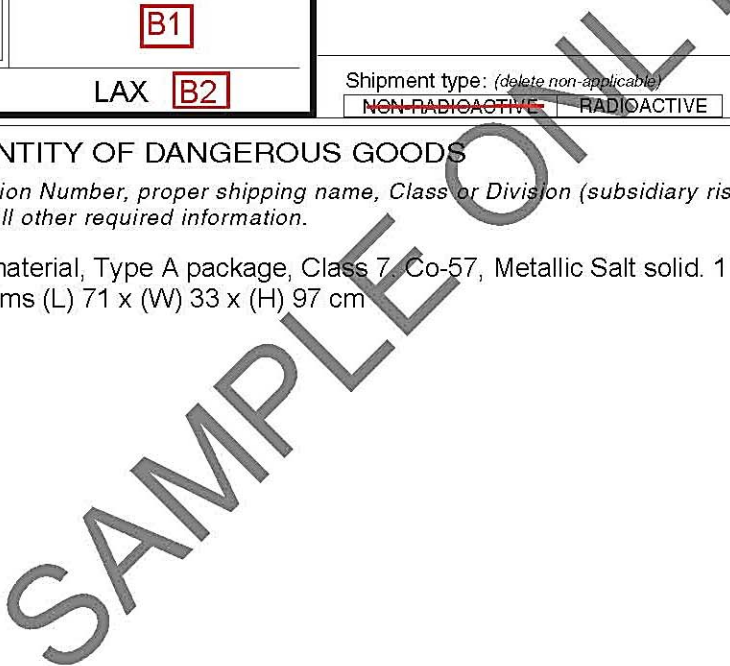

**Additional Handling Information**

**I hereby declare that the contents of this consignment are fully and accurately described above by the proper shipping name, and are classified, packaged, marked and labelled/placarded, and are in all respects in proper condition for transport according to applicable International and National Governmental Regulations. I declare that all of the applicable air transport requirements have been met.**

Name/Title of Signatory  
Good de Goody / Shipping Tech  
Place and Date  
Goodtown, GA 30005  
Signature  
*(see warning above)*

**D** (123) 123 - 1234 Emergency Telephone Number

Good de Goody

FOR RADIOACTIVE MATERIAL SHIPMENT ACCEPTABLE FOR PASSENGER AIRCRAFT, THE SHIPMENT CONTAINS RADIOACTIVE MATERIAL INTENDED FOR USE IN OR INCIDENT TO RESEARCH, MEDICAL DIAGNOSIS, OR TREATMENT. ADR EUROPEAN TRANSPORT STATEMENT: CARRIAGE IN ACCORDANCE WITH 1.1.4.2.1



Step 9: The Shipper's Dangerous Goods (DG) template and a completed sample Dangerous Goods (DG) Form (with steps A to D) can be found at: [www.ezag.com/ezip.support](http://www.ezag.com/ezip.support).

A completed sample (with steps A to D), has also been included with your Return Kit.

Please note that the DG form must be typed and signed by a qualified & trained shipper.

**A) Complete Shipper and Consignee boxes in upper left side.**

*You are the Shipper, and EZIP, 1800 N Keystone Street, Burbank, CA 91504 is the Consignee.*

**B) Transportation Details:**

1. **Airport of Departure:** Contact your local FedEx office for location code.
2. **Airport of Destination:** LAX
3. **For disposals only:** cross out "Passenger and Cargo Aircraft".
4. **Air Waybill #:** this is a 12 digit tracking # from your FedEx Air Waybill.
5. **Shipper's Reference No. :** notate EZIP issued Return Number.
6. **Shipment Type:** cross out "Non-Radioactive".

**C) Nature & Quantity of Dangerous Goods:**

1. **UN or ID #:** UN2915
2. **Proper Shipping Name:** Radioactive material, Type A package
3. **Class or Division:** 7
4. **Packaging Group:** skip this field
5. **Quantity and type of packaging:** Isotope to be returned, Physical & Chemical form (metallic salt solid for most medical returns), Activity in MBq, and number of Type A Packages.
6. **Packaging Instructions:** II Yellow , TI , & dimensions of box in centimeters
7. **Authorization:** skip this field

**D) Shipper's 24 hour Emergency Telephone Phone Number**

Under "Additional Handling Information", record the Shipper's 24 hour Emergency phone #. This is **your** 24 hour telephone number should an emergency arise with your package during transit. This number is also recorded on the Emergency Response / Return Packing List **Sheet B**.



⇒ **Once all information is typed, the DG form is complete**

Print 3 copies on candy striped paper. If using a black & white printer, put the provided candy striped paper in your printer. The typed DG Form must have the colored candy stripe or it will be rejected by the carrier (i.e. FedEx).



⇒ **Outer Box Labeling & Pouches:**

1. Mark RA# on provided EZIP return label and adhere to box.
2. Place 3 DG copies and FedEx Air Waybill in large FedEx pouch and adhere to package.
3. Adhere small packing list pouch (containing the original Emergency Response / Return Packing List - **Sheet B**) to package.

**Note:** Shipper's Declaration for DG Form must be completed and signed by a qualified DOT trained shipper.

**Regulatory References:** Title 49 CFR 172.101, 172.204, 172.403, 172.704, 173.403, 173.425, 173.433. Other requirements may also apply.

***Once you have carefully completed Steps 1 through 9 for your UN2915 return,  
your source is now ready to ship to EZIP!!!***